


How to Change the Code


Failure to follow the instructions could result in damage to your lock so please read carefully. Hold the outside body in the horizontal position. Remove the 4 red screws. Carefully remove the plate, as there are many springs attached to. (Use #2 Phillips only to remove red screws)

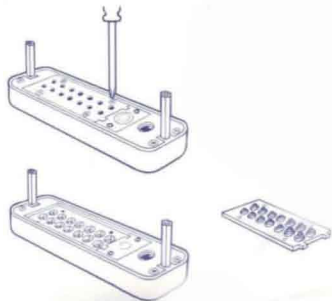

Watch the Video

IMPORTANT

NOTE: You must press in the C button from the underneath until you have completed the code change, as it is impossible to lift out or insert the code tumblers if you do not. Forcing them will damage the lock.

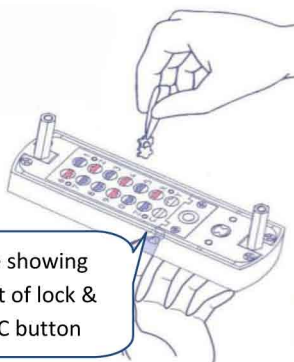


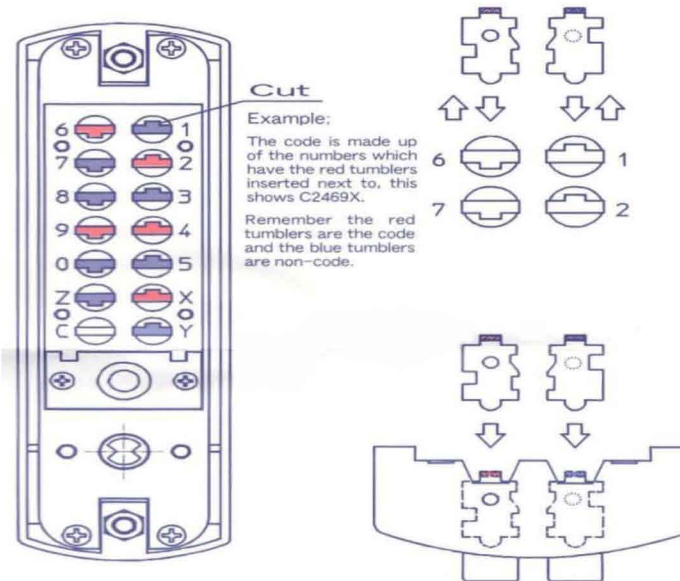
Example showing the front of lock & holding C button

There are blue tumblers (non-code) and red tumblers (code). Your code is made up from the red tumblers always prefixed by C to clear. (Never remove the C tumbler). **While** continuing to press in the C button and using the tweezers provided, lift out the code / non-code tumblers you wish to change.

Remember to press in the C button when you replace the code/non-code tumblers

When you re-insert the code/non-code tumblers for your new code, you must continue to press in the C button.

While pressing in the C button make sure that the colored top end of the tumbler is facing upwards. Match the  of the tumbler to the exact cut insert of the body.



Using the tumblers provided, the code can be changed from a 3 digit to a 7 digit number, always prefixed by C to clear. To increase the numbers in the combination, remove the **blue** and add the red tumblers. To decrease the numbers in the combination, remove the red tumblers and add the blue. (If you insert a tumbler in the wrong position, press the C button and lift the tumbler out.) Now that combination has been changed, release the C button.

Replace the plate carefully. Always test your new code before installing/ reinstalling your lock to the door.

Warranty will be void if lock is oiled or silver screws are removed from outside body.